


TRONIX

213-261

DALI

DALI 0/1-10V Dimmer

- 1 DALI address, 1 channel 0/1-10V output.
 - Powered by DALI bus.
 - 10A current dry mains rated relay output.
- contact relay output.
- 0-10V or 1-10V output selectable.
 - In accordance with DALI standard protocol IEC 62386-101, IEC 62386-102, IEC 62386-206 and in compliance with DALI products from other international incorporation.
 - Compliant DALI device type 5.

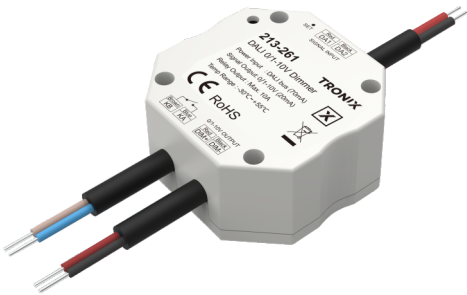


CE RoHS

Technical Parameters


Input and Output		Dimming data		Safety and EMC	
Power input	DALI bus	Dimming range	0 -100%	EMC standard	EN IEC 55015/EN IEC 61547
Output signal	0/1-10V, 20mA	Dimming curve	Linear(default)	Safety standard	EN 61347-1/-2
Max relay load current	10A resistive load 8A incandescent 5A inductive load	Environment		Certification	CE RoHS
Working current	Max. 70mA@16V	Operation temperature	Ta: -30℃ ~ +55℃	Package	
Static current	10mA@16V	Case temperature (Max.)	Tc: +60℃	Size	L75 x W 75 x H40mm
Warranty		IP rating	IP20	Gross weight	0.08Kg
Warranty	5 years				

Mechanical Structures and Installations

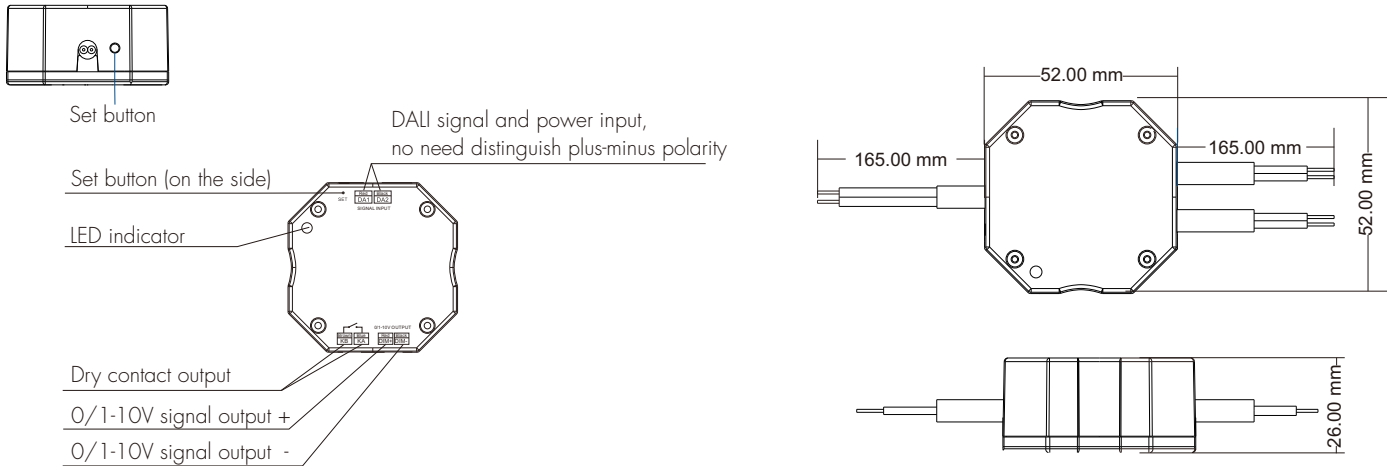


Wiring Diagram

- Connect with 0/1-10V dimming driver (no use dry contact output)

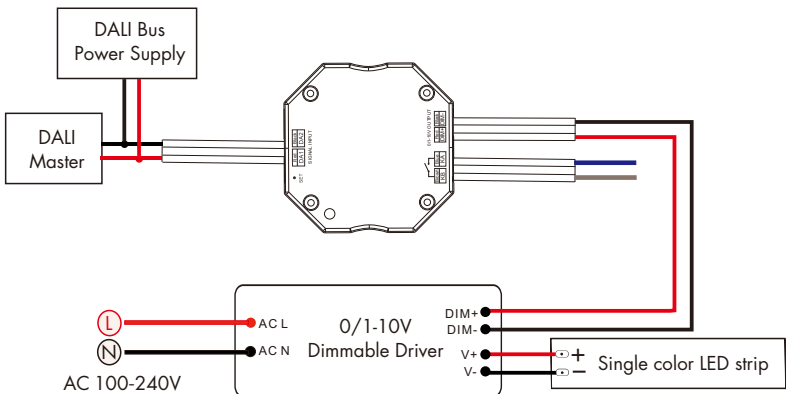

- Connect with 0/1-10V dimming driver (use dry contact output)

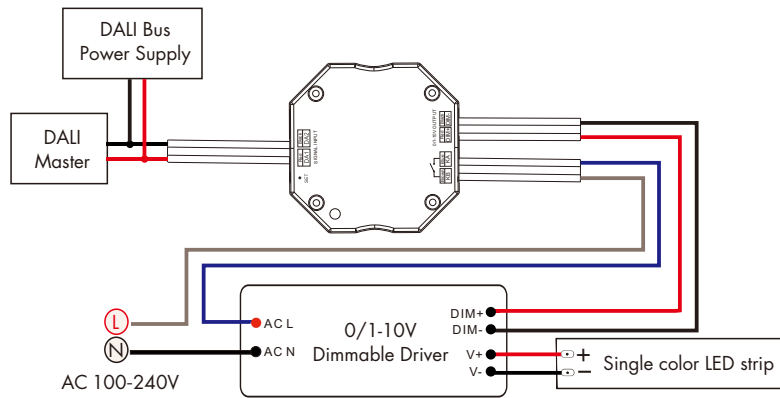

Note:

We recommend the number of LED drivers connected to 0/1-10V dimmer does not exceed 20 pieces,
The maximum length of the wires from dimmer to LED driver should be no more than 50 meters.

Operation

Set 0/1-10V output mode

Within 3s of power-up, press and hold the set button for 5s to switch between 0-10V or 1-10V output type:

When LED flash once, output 0-10V signal.

When LED flash twice, output 1-10V signal.

ON/OFF and dimming by set button

After 3s of power-up, short press the set button to turn on/off the relay and 0/1-10V signal.

Press and hold the set button 1-6s to adjust 0/1-10V output signal level, namely adjust the light brightness.

DALI address assigned by DALI masters

DALI address can be assigned by DALI Master controller automatically.

Please refer to user manuals of compatible DALI Masters for specific operations.