



This DMX master controller controls 4 zones of DMX decoders by setting DMX decoders' address as follows:
DMX decoders with address 001 will be controlled by zone 1,
DMX decoders with address 005 will be controlled by zone 2,
DMX decoders with address 009 will be controlled by zone 3,
DMX decoders with address 013 will be controlled by zone 4.

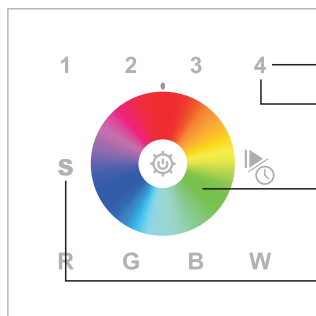

Save color/scene/mode

- Step 1:** Choose and click one or multiple paired zone numbers(e.g. zone 4)
- Step 4:** Immediately click any number of 1-4(e.g. 4)(here the numbers mean 4 scenes can be saved for the selected zone) , LED lights connected with the DMX decoder flicker once means the color/scene was saved successfully.
- Step 2:** Touch the color wheel or click the other buttons to select the scene you like
- Step 3:** Press and hold down button **S** until the LED indicator flashes once

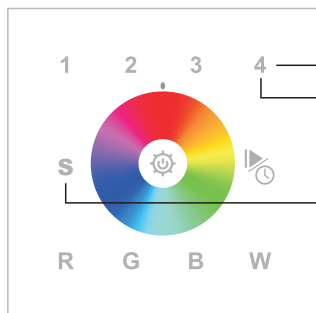

Recall the saved colors/scenes

- Step 1:** Choose and click one or multiple paired zone numbers(e.g. zone 4)
- Step 3:** Click any numbers 1-4(e.g. 4)(here the numbers means the 4 scenes saved for selected zone) to recall the saved scene
- Step 2:** Click button **S**

Installation

